

## ***APPLICATIONS***

**Cadillac CTS 2003-2007**

**Cadillac SRX 2004-2006**

# **CT23CA03**


### **KIT FEATURES**

- DIN Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Radio Provision
- Stacked ISO Mount Units Provision
- Stacked DIN Head Units Provision
- Painted To Match Factory Dash



### **KIT COMPONENTS**

A) Radio Housing • B) DDIN Brackets • C) DDIN Trim Plate • D) ISO Brackets • E) Trim Plate • F) (8) Phillips screws  
• (G) Pocket

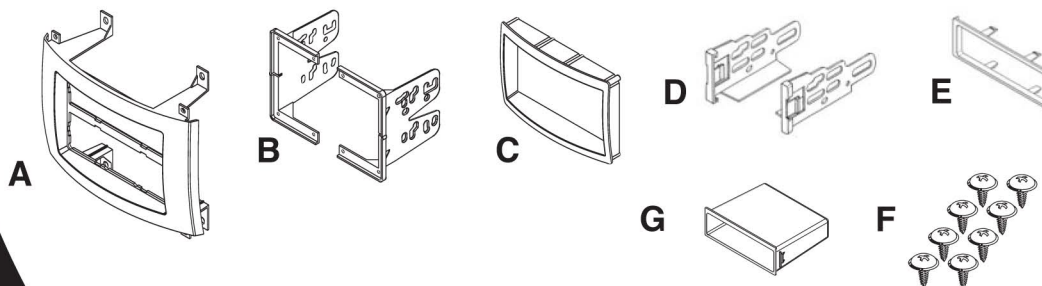

### **TOOLS REQUIRED:**

Phillips Screwdriver • Small Flat Blade Screwdriver • Socket Wrench



# TABLE OF CONTENTS

---

*Dash Disassembly* ..... 1





*Kit Assembly* .....2, 3, 4

*Final Assembly* ..... 5

# **CADILLAC CTS 2003-2007**

# **CADILLAC SRX 2004-2006**


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the center air vent assembly above the radio. (Figure A)
- 3** Open ashtray and remove (1) Phillips head screw from inside ashtray.
- 4** Unclip and remove the a/c control/ashtray assembly below the radio. (Figure B)
- 5** Remove (4) 10 MM screws securing the radio to the dash. (Figure C, D)

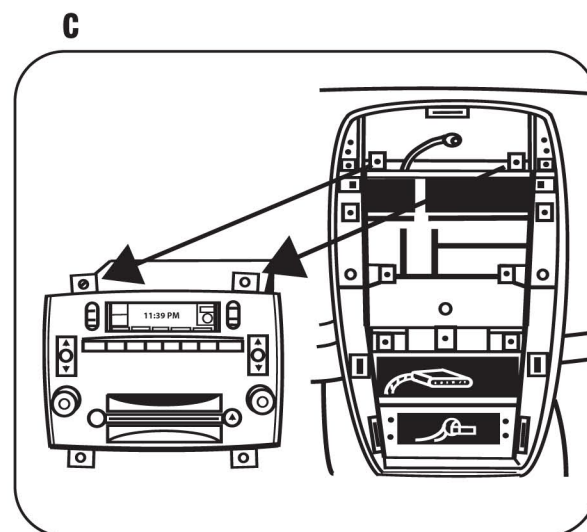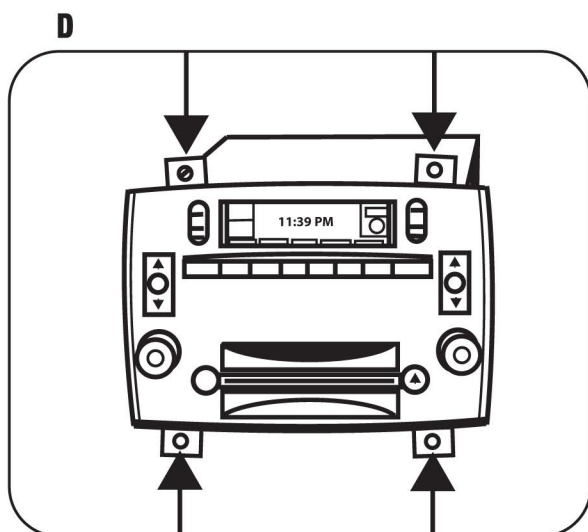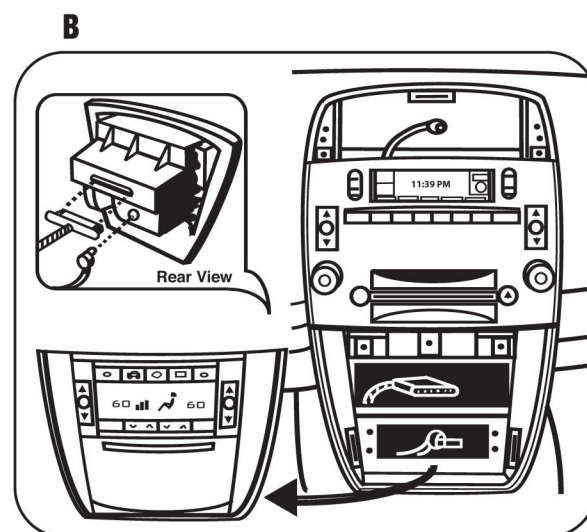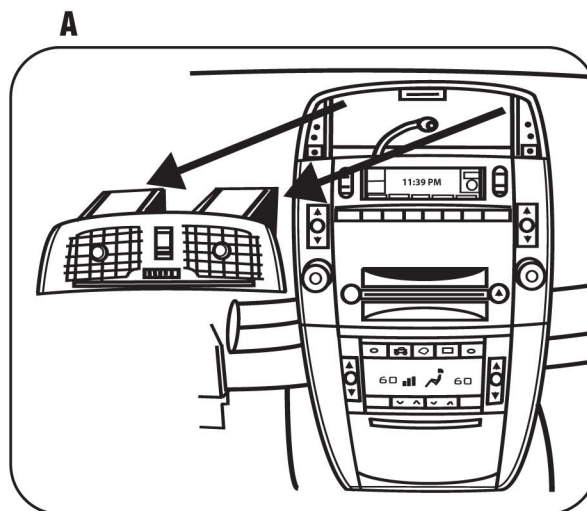


## **DIN RADIO PROVISION WITH POCKET**

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A)
- 2** Slide the aftermarket head unit into the cage and secure. (Figure B)
- 3** Slide the supplied pocket into the unused opening.

**A**

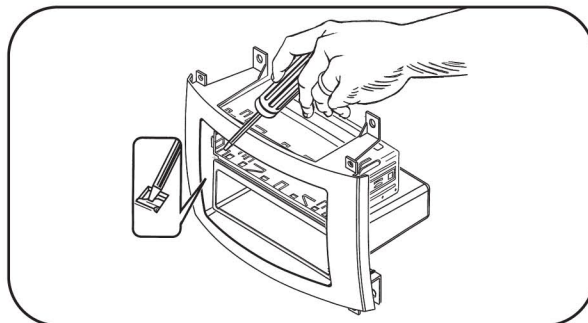


**B**

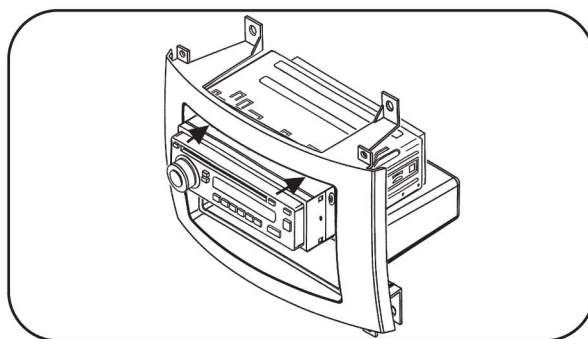


## **ISO MOUNT RADIO PROVISION WITH POCKET**

- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A)
- 2** Slide the head unit into the radio opening until the side clips engage. (Figure B)
- 3** Snap the Trim plate into the Radio Housing. (Figure B)
- 4** Slide the supplied pocket into the unused opening.

**A**

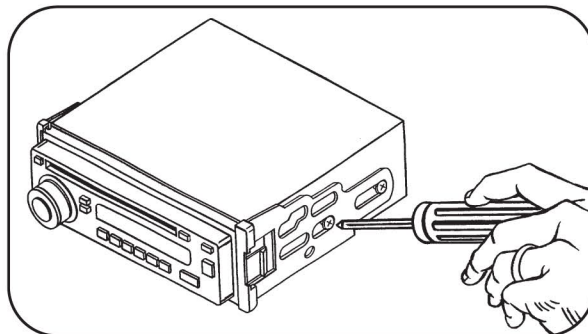


**B**

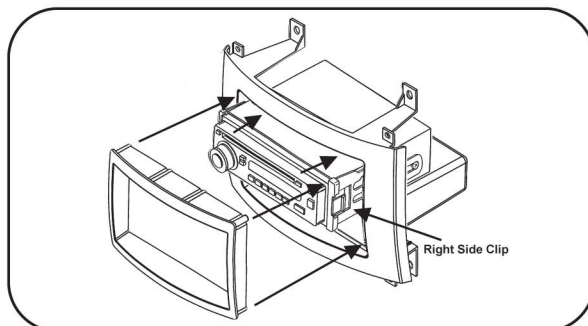


## DOUBLE DIN RADIO PROVISION

- 1 Remove the centre bar from the CT23CA03 facia.
- 2 Attach the corresponding bracket to the DDIN head unit. (Figure B)
- 3 Insert the DDIN trim plate into the radio housing. (Figure C)
- 4 Position the bracket/radio assembly to the back of the radio housing and secure with the (8) Phillips screws provided. (Figure D)


A

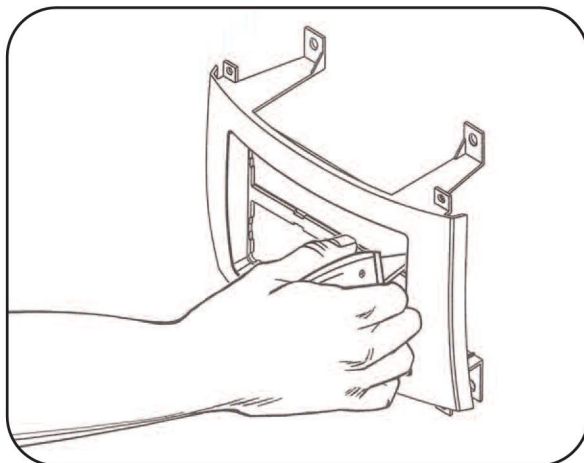


B

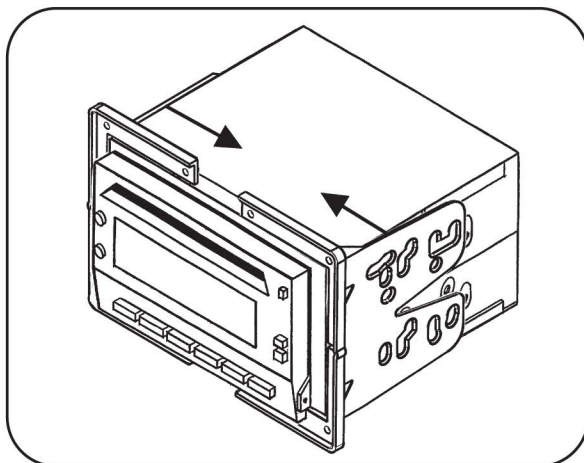

C

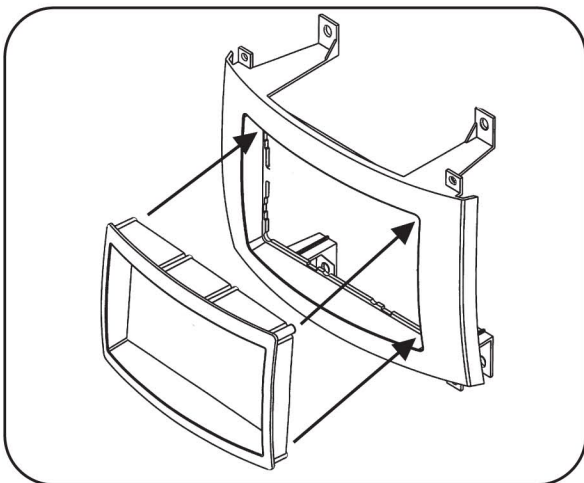

D

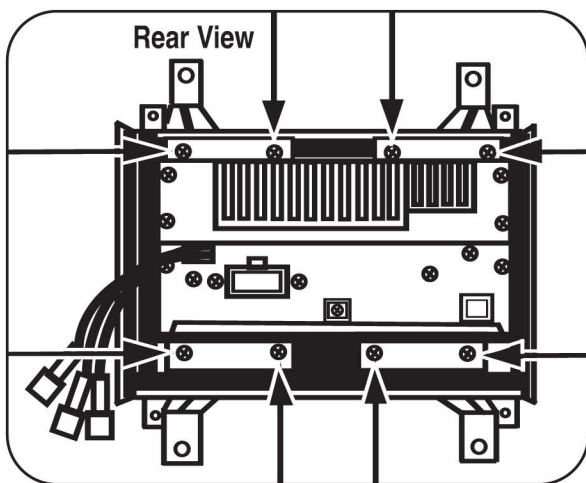





## STACKED ISO MOUNT UNITS PROVISION

- 1 Mount the ISO Brackets to the head units with the screws supplied with the unit. (Figure A)
- 2 Slide the head units into the radio openings until the side clips engage. (Figure B)
- 3 Snap the Trim plate into the Radio Housing. (Figure B)

A

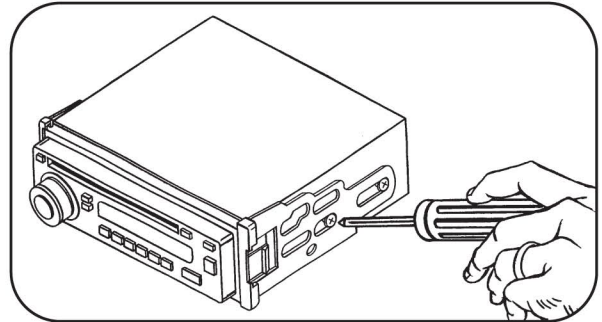


B

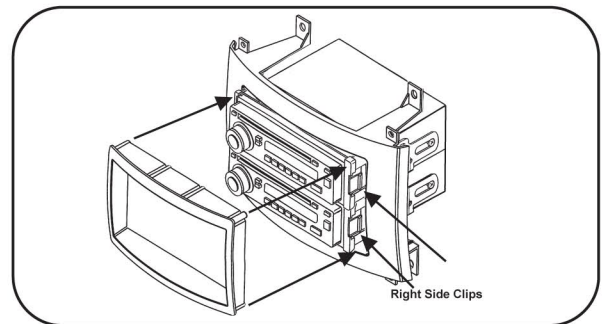

## STACKED DIN HEAD UNITS PROVISION

- 1 Slide the DIN cages into the Radio Housing and secure by bending the metal locking tabs outward. (Figure A)
- 2 Slide the aftermarket head units into the cages and secure. (Figure B)

A

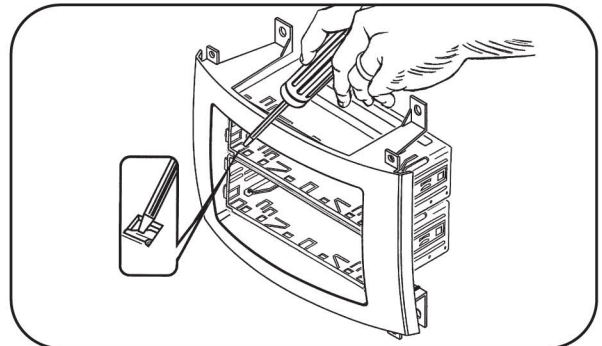

B

